



# Lighting

1. Check that your gas cylinder is full and properly connected to the regulator.
2. Check that there are no leaks in the gas supply system. See leak testing.
3. Ensure all instructions have been read carefully.
4. **WARNING:** Open lid before lighting.
5. Set control knobs to "OFF" and turn on the gas supply.
6. Push and turn control knob to "HIGH" and light burner with match or taper. Burner should ignite within 5 seconds but keep control knob depressed for 10 seconds. Burner should now be alight. Repeat this operation for each burner.

## If the burner does not ignite

1. Push and turn control knob to "OFF". Wait 5 minutes, then try again repeating the above procedures.
2. If the burner still does not light, consult our Trouble-Shooting guide. If the problem can not be resolved, do not attempt to operate the appliance. Contact your Dealer or approved Service Centre.

## Shutting Down

1. Turn off cylinder valve.
2. Turn control knobs to "OFF". These are obtainable from ourselves or your dealer. If a problem is found with the regulator, hose, burner or control valves, do not attempt to repair. Contact us directly or your approved service centre for repairs or replacement parts. To ensure optimum performance, it is essential that only original replacement parts are used.